

Golf Auto Score

T65X Alterations

Following is the alterations required for the Lexmark T65x Series Printers to cater for the Golf Score Cards.

Product required for the alteration

1 x L-Bracket

Product Preparation

L-Bracket

Apply double sided tape to the base of the L-Bracket as Shown.

Figure 1



L-bracket dimensions:

Base Length:	42mm
Rise Length:	46mm

Note: The length is measured on the outside of the L-Bracket.

Installation Instructions

Follow the manufactures recommendations for unpacking the printer and removing the packing material.

- 1) Remove tray one, clean any dust or marks from the inside base of tray one, seat and position the media correctly.
- 2) Remove the adhesive protection layer and place the L-bracket with Double Sided Tape gently against the media.
- 3) Apply down pressure to the L-Bracket base to firmly secure into position.
- 4) With tray one removed, lower the tray one Pick Arm Assembly as shown in Figure 3.

Figure 3



- 5) Remove the right side pick tyre only leaving the hub still in place as shown in figure 4.

Figure 4



- 6) Release Pick Arm Assembly and reinsert tray one.
- 7) Plug the printer into the mains power supply.
- 8) Hold down the Tick and Right arrow buttons on the control panel and turn the printer on.
- 9) Only release the Control Panel buttons when there is text visible in the display. This will allow the printer to go into a Config Menu.
- 10) Once in the Config Menu use the Down or Up arrow buttons to scroll to “Size Sensing”, select by pressing the Tick button.
- 11) Using the Up or Down arrow buttons scroll to Tray 1 Sensing and press the Tick button to select.
- 12) Once in Tray 1 “Sensing”, set Auto Size Sensing to off, to select and save press the Tick button.
- 13) Return to the main menu by pressing the Back button until back at the “Tray 1 Size Sensing” main menu, using the Up or Down arrow buttons scroll to the “Exit Config Menu” and press the Tick Button. This will return the printer to the Ready menu.
- 14) Once Ready is displayed on the screen press the “Menu” button. This will allow the operator into the User Menu.
- 15) “Paper Menu” should at this time have a tick next to it, if not use the Up and Down arrows to position the Tick beside the “Paper Menu”.
- 16) Press the Tick button to enter “Paper Menu”
- 17) Using the Down arrow scroll to “Paper Size/Type” and press the Tick button.
- 18) Select Tray 1 by positioning the Tick beside Tray 1 and Press the Tick button.
- 19) Using the Left or Right arrow keys scroll through to “Universal” and press the Tick button to select.
- 20) The printer will request Type of paper this can be selected by using the Left and Right arrow buttons.
- 21) Select “Card Stock” by pressing the Tick button.
- 22) Once “Card Stock” has been selected the printer will return to “Paper Menu.
- 23) Select MP Feeder Size/Type by positioning the Tick beside MP Feeder Size/Type and Press the Tick button.
- 24) Using the Left or Right arrow keys scroll through to “A4” and press the Tick button to select.
- 25) The printer will request Type of paper this can be selected by using the Left and Right arrow buttons.
- 26) Select “Plain Paper” by pressing the Tick button.
- 27) Once “Plain Paper” has been selected the printer will return to “Paper Menu”, from this menu press the “Back” button to return to Ready.
- 28) Once ready is showing on the printers display load the MP Feeder with A4 paper and print a “Menu settings page” under the “Reports Menu”.
- 29) Confirm that Tray 1 paper size and type are now correctly set to “Universal” media size and “Card Stock” for the media type.

This completes the alteration for the T65x series Lexmark Printer for the Golf Auto Score media size and type.

Golf Auto Score may need to adjust the margin settings

- 1) Hold down the Down and Right arrow buttons on the control panel and turn the printer on.
- 2) Only release the Control Panel buttons when there is text visible in the display. This will allow the printer to go into a Diagnostics Menu.
- 3) Once in the Diagnostics Menu use the Down or Up arrow buttons to scroll to “Registration”, select by pressing the Tick button.
- 4) Use the Down arrow to scroll to “Quick Test”, select by pressing the Tick button.
- 5) Check print out, adjust as required.